Fixing Instructions for Prefab Corners PS2, PS3 & PS4

- 1. Fix both internal and external corners prior to the intermediate lengths.
- 2. Prior to fixing the internal corner, chip any slight radius in the plaster. This decreases the extent of out of squareness that generally occurs in a plastered internal corner.
- 3. When fixing both internal and external corner, use the supplied 1 mm PVC Shim that will loop over the supplied HPS anchor. Depending on the out of squareness of buildings corner additional PVC can be added. If less than 1 mm is required, ½ mm veneer or PVC edging must be used. This packing must be supplied by the ceiling contractor and must be shaped as per the supplied PVC Shim.
- 4. The abutment of intermediate lengths to corner module must be joined with the supplied S/S alignment pins. The pins must be fully inserted into the screw ports which have been pilot drilled with a 2.5 mm HSS bit, enabling the S/S pin to have a snug but sliding fit. The adjoining length must be prepared in a similar fashion but only pilot drilled to a depth of 30 mm. After fixing the adjoining length, push the S/S pin from the prefab corner into the adjoining length using a small flat screwdriver.
- 5. Fill any gaps at the corner module with white silicone and clean away any residue.

