



installation guide

Jumbo Prefabricated Bulkheads

Fixing Instruction

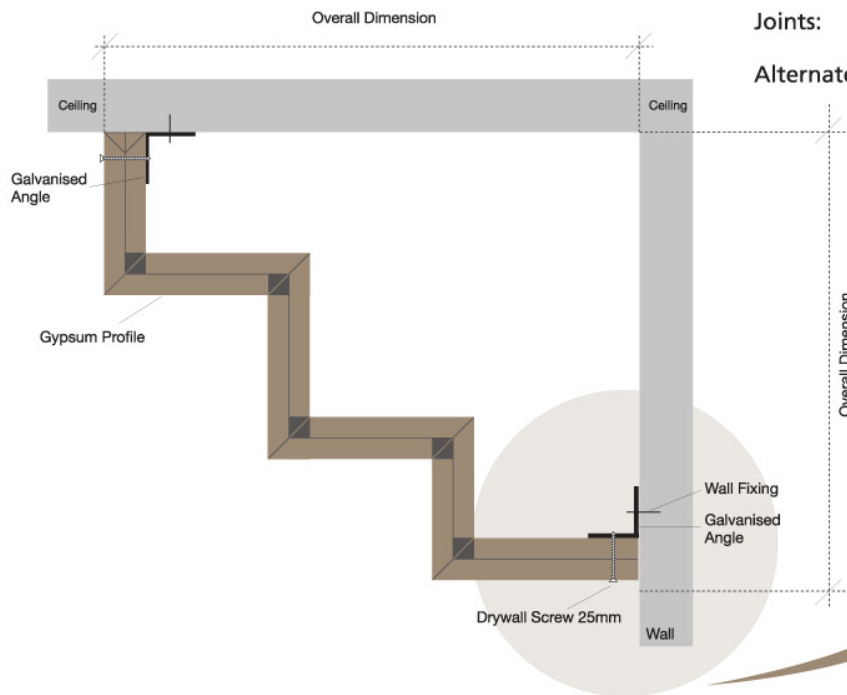

- Joints: 1. Butt joint finish with Utility Adhesive
2. Taped and jointed
- Alternate: Plasterboard trim (recessed detail) can be used at the junction between walls and bulkhead

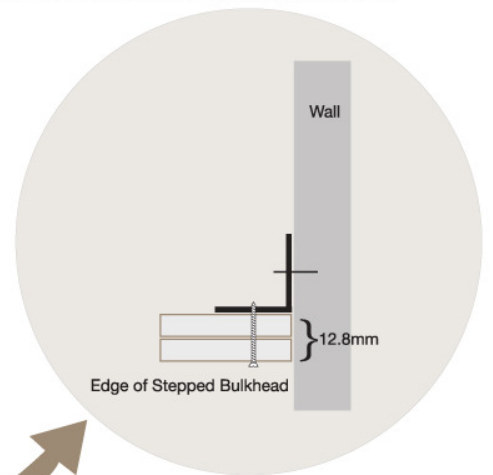

DIN EN 9001:2000
CERTIFICATE NO. 01 100 8280061
ISO CERTIFICATION FOR DURBAN ONLY

Tel: +27(0)31 563 7307
Website: www.pelican.co.za
Email: info@pelican.co.za

